
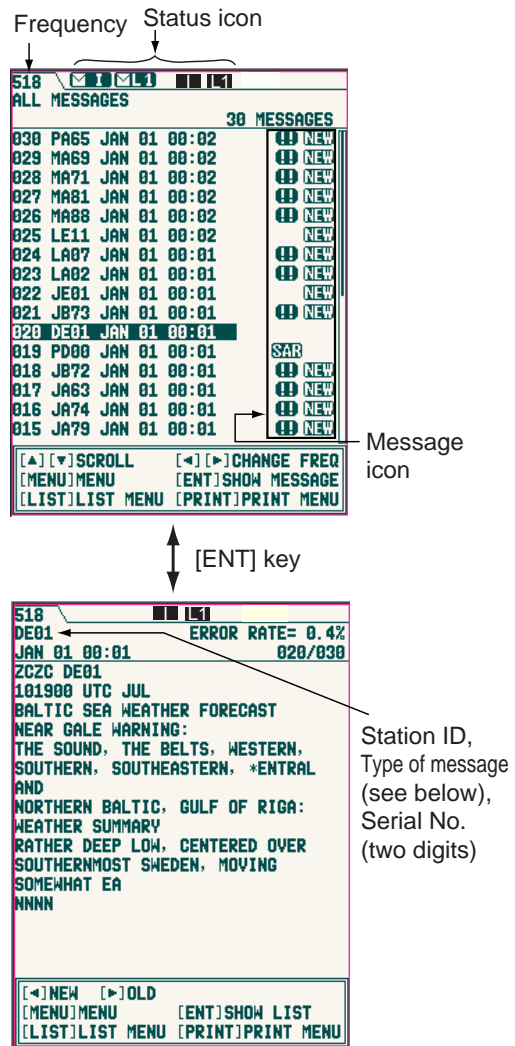


NAVTEX RECEIVER NX-700A/B Operator's Guide

The purpose of this guide is to provide the basic operating procedures for this equipment. For more detailed information, see the Operator's Manual.

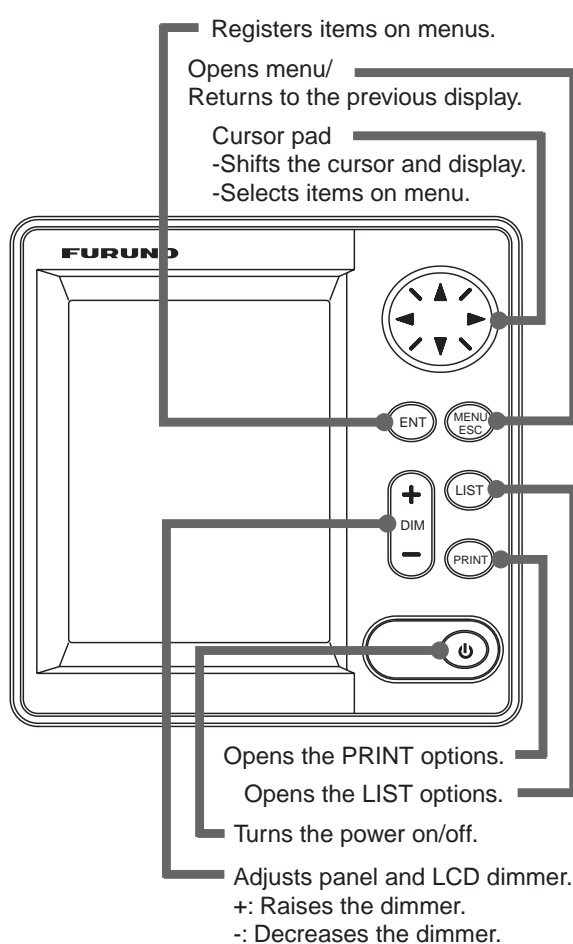

	Icon	Meaning
Status		An international frequency (518 kHz) message has not been read.
		A local frequency message has not been read. (L1: 490 kHz, L2: 4209.5 kHz)
		A local frequency message has not been read. (L1: 490 kHz, L2: 4209.5 kHz)
		While receiving a message. (I: International, L1/L2: Local)
		Print error (ex. no paper)
Message		While printing.
		Message is displayed for the first time.
		Message type D (SAR) is displayed.
		Message type A, B or L (Warning) is displayed.
		Protected message

- Type of message
- A: navigational warning (C)
 - B: meteorological warning (C)
 - C: ice report (C)
 - D: search and rescue information/armed robbery (C) /Search and rescue information/ pirate attack warnings (R)
 - E: meteorological forecast (C)
 - F: pilot message (C)
 - G: AIS (C)
 - H: LORAN-C message (I) / LORAN message (R)
 - I: reserved presently not used (I) / Spare (R)
 - J: SATNAV message (C)
 - K: Other electronic navigational aid system message (C)
 - L: navigational warning (I: additional) / (R: addition to "A")
 - M to Y: reserved presently not used (I) / V to Y: Special services allocation by the NAVTEX Co-ordinating Panel (R)
 - Z: QRU (no message on hand)
- I: IEC type
R: Russian type
C: Common



Confirming the New Message

SAR (Search and Rescue) message

1. When an SAR message is received, the audible alert sounds and details for the SAR message appear.
2. Press any key other than ⏻ key to silence the alarm.

Other messages

1. When a message other than an SAR message is received, the display shows the message "Received new int'l (or local) msg."
2. If you want to read the message immediately, press ⏪ to choose "Yes" and then press the **ENT** key to display the message.
To read the message later, choose "No" and then press the **ENT** key to close the window.

Switching the Frequency to Display

With showing the message list, you can switch the frequency to 518 kHz or 490 (or 4209.5) kHz by pressing ⏪ or ⏩ key.

Choosing the Receive Mode

1. Press the **MENU/ESC** key to show the main menu.
2. Press ▲ or ▼ to choose NAVTEX, and then press **ENT** key.
3. Press ▲ or ▼ to choose Mask Mode, and then press the **ENT** key.
4. Press ▲ or ▼ to choose INS or Manual as appropriate, and then press the **ENT** key.
5. Press the **MENU/ESC** key several times to close the menu.


Choosing the Local Frequency

1. Press the **MENU/ESC** key to show the main menu.
2. Press ▲ or ▼ to choose NAVTEX, and then press the **ENT** key.
3. Press ▲ or ▼ to choose Local Channel, and then press the **ENT** key.

4. Press ▲ or ▼ to choose the frequency 490 kHz or 4209.5 kHz, and then press the **ENT** key.
5. Press the **MENU/ESC** key several times to close the menu.

Editing the Settings for Station and Message

1. Press the **MENU/ESC** key to show the main menu.
2. Press ▲ or ▼ to choose NAVTEX, and then press the **ENT** key.
3. Press ▲ or ▼ to choose Rcv Mask, and then press the **ENT** key.

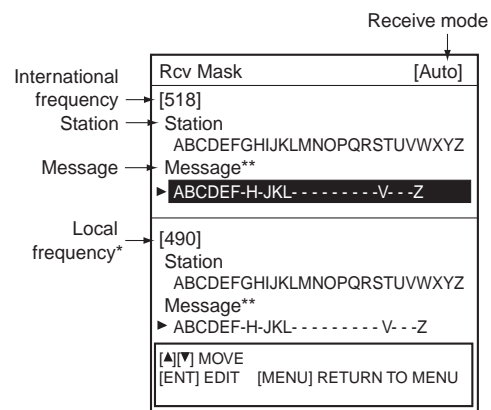

* : Local channel selected at "LOCAL CHANNEL" on the NAVTEX menu.
**: For Russian type, all characters appear.

4. Press ▲ or ▼ to choose the item to edit, and then press the **ENT** key to show the alphabet selection window.



5. Press ⏪ or ⏩ to choose the alphabet desired, and then press ▲ or ▼ to choose to receive or not.
The alphabet you have chosen not to receive is marked with "-" (hyphen).
6. Press the **ENT** key.
7. Repeat steps 4 through 6 to complete.
8. Press the **MENU/ESC** key to close the window.

